

# KVH TracVision®



# DISH 500 Operation

## Configuring the System

To configure the TracVision system for DISH 500, follow these steps:

1. Turn **ON** your receiver, TV, and TracVision system.
2. Using the receiver's remote control, go to the *Point Dish/Signal Strength* screen (press **MENU,6,1,1** (on most models)) and select satellite 119 and transponder 11.
3. When the switchplate's Status Light fully illuminates (stops flashing), check the signal strength meter on the TV. If the meter turns green and shows "Locked - Echostar 119 West", go to step 6.
4. Press and hold the switchplate's **SAT SELECT** button for 1/2 second. The Status Light starts flashing.
5. When the switchplate's Status Light fully illuminates again, check the signal strength meter. If the meter turns green and shows "Locked - Echostar 119 West", proceed to step 6. If the meter stays red, repeat step 4.
6. Press and hold the **SAT SELECT** button for 5 seconds, until the Status Light flashes quickly 5 times.

## Switching Satellites

Once the system is configured for DISH 500, you can switch between the 119 and 110 satellites. **IMPORTANT!** Only switch satellites when the vehicle is stationary.

Press the **SAT SELECT** button to switch between satellites.

**NOTE:** If you turn off the system, move the vehicle, then turn the system back on, the antenna may not be able to find the correct satellite upon startup. In this case, you will need to reset the system to the factory default and then reconfigure the system for DISH 500.

## Resetting to Factory Default

1. Turn **OFF** the TracVision's **POWER** button.
2. Press and hold the **SAT SELECT** button as you turn **ON** the TracVision system.
3. Continue holding down the **SAT SELECT** button (5 seconds) until the Status Light flashes quickly 5 times, then release the button to start up in factory default mode.