

To quickly start watching satellite TV:



PLEASE NOTE! If you left the TracVision system ON when you turned off your vehicle, TracVision will automatically turn ON when you start up your vehicle. **DO NOT DO ANYTHING!** Wait 30-60 seconds for the Program Guide to load and you are ready to watch TV – if the Program Guide does not load, go to step 7 below.

- 1 Turn on your car.
- 2 Ensure that the receiver's power switch is turned ON. The light should be lit.
- 3 Turn on your video screen and select the satellite input (*not the DVD/VCR input*).
- 4 Do not move the vehicle for 20 seconds.
- 5 If the TracVision system was left on when you last turned off the vehicle, **Message 1** then **Message 2** will appear on the screen:



Message 1

If your satellite dish is ready for DIRECTV® service, please wait until your Advanced Program Guide™ is prepared.

Installation

Searching for satellite signal...

then


Message 2

If your satellite dish is ready for DIRECTV[®] service, please wait until your Advanced Program Guide[™] is prepared.

Installation

■■■■■■■■□□□□□□□□
Acquiring guide data...

 
- 6** If Message 1 does not appear after 30 seconds, **press the remote control's SAT button.* Then press the POWER button.** The receiver beeps twice. **Do not move the vehicle for 20 seconds.**
- 7** If Message 2 does not appear after Message 1, **ensure that the antenna has a clear view of the satellite and there is no standing water (rain, dew, or ice) on the dome.** The antenna requires an unobstructed view of the southern sky to receive satellite TV signals.** Once the antenna finds the satellite, and the receiver downloads the Program Guide (*it may take 60 seconds*), you can start watching TV!***
- 
- The diagram shows a top-down view of a remote control. At the top is a 'TRAVELVISION' button. Below it is a row of five buttons: 'DVD', 'VCR', 'AUX', 'TV', and 'SAT'. The 'PWR' button is located to the right of the 'TRAVELVISION' button. Below the 'DVD' through 'TV' buttons is a 'GUIDE' button. At the bottom are three buttons: 'MENU', 'TURBO' (with a circular arrow icon), and 'FAV'. Two arrows point to the 'PWR' and 'SAT' buttons, indicating they are the ones to be pressed.

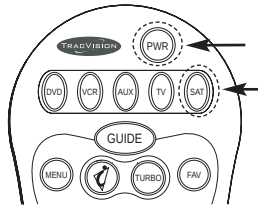

Changing channels:

To change channels, select **(A)**, **(B)** or **(C)**:

 - A** Press the CHANNEL (CH) button to tune to the next or previous channel.
- B** Use the numeric keypad to enter the channel number.
- C** Press the GUIDE button to bring up the **Program Guide**. Once you're in the Program Guide, use the joystick or CHANNEL (CH) button to scroll through the list, and press the SELECT button to tune to a channel.

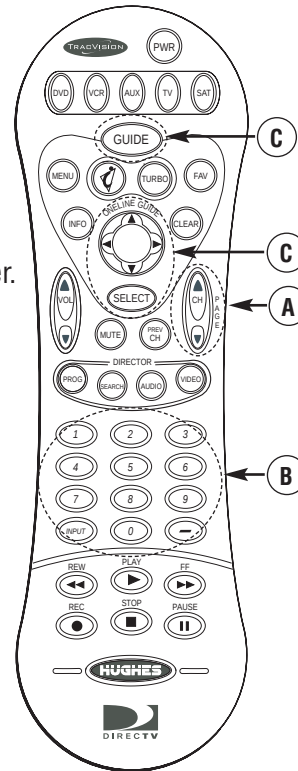

Program Guide

PROGRAM GUIDE

All Channels

The Weather Channel

None • 6:00PM - 7:00PM • Weather Local and national forecast, weekly planner and weekend outlook; severe weather focus at 10 minutes to the hour. Series, Interactive.

Thu, Feb 7 • 6:00PM




Picture-in-Guide

An image of the currently airing program highlighted in the menu selection appears here.

Today	6 PM	6:30	7 PM	7:30
	The Weather Channel		The Weather Channel	
	DIRECTV INTERACTIVE Center			
	DIRECTV Pay Per View Previews ENTER			
	DIRECTV FreeView  	DIRECTV Customer News		

Viewing a program description:

 To view a description of the currently selected program, press the INFO button.

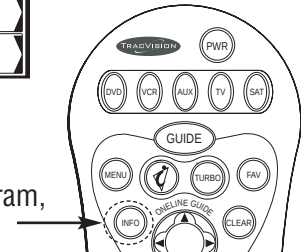

* If the SAT button doesn't illuminate red, check the remote control's batteries. See page 3.12 of the *User's Guide*.

** For details about satellite reception requirements, see page 1.6 of the **User's Guide**.

*** If you can only access the DIRECTV Preview Channel, your receiver has not been activated. See page 10.6 of the **User's Guide**.